

DVR X10 manual



Key Function

Mode key: in the state of standby or playback, **long** press the key to enter the menu, **short** press to switch the setting options; in the state of standby, **short** press to switch the shooting or replay mode; in the state of recording, **short** press to use lock function. **Long** press to switch recording on/off function

Snap-shot key:

In the state of standby, the key can be used to take photos

Up key:

After connecting the camera, **short** press the key to switch screen displaying; in the state of function table, the key is used to choose functions; in the state of playback, the key is used to choose functions: in the state of playback, the key is used to browse photos; in the state of replaying video, the key is used for fast forward or rewind operation

Down key:

In the state of standby, **short** press Down key can fast switch motion detection function, in the state of function table, the key is used for function selection; in the state of playback, the key is used to browse photos; in the state of replaying video, the key is used for fast forward or rewind operation

On/off key:

Long press to turn on/off the device. In the state of standby and recording, **short** press to switch IR night vision light.

Rec/OK key:

REC key is used to start/stop recording; in the state of function table, used to confirm function settings; in the state of replaying video, used to start/pause playing; **long** press can fast turn off the screen.

Operating Guidance

1. Confirm the inserting direction of TF card, wrong inserting direction could damage the device and TF card
2. On first use, please, format the TF card on **the** device
3. Audio switch: in the state of shooting, **long** press Mode key to turn on/off the microphone

Date/time setting: enter the menu, press mode key to switch the adjusting options, and press OK key to finish and exit.