

# How to configure the WiFi function use the WiFi setting tool

## 1. Before Configuration


The software's operating environment is net framework 2.0. Ensure that you have installed net framework 2.0 or later version before using the software (Installation package is under the [dotnetfx] folder).

For this software is using the external dynamic link library, so please run the "register" order first, and then open the software. Only the administrator can run the order if it is under Win7 environment.

## 2. Operation Steps

### Step 1: Open the Software


The software interface is shown as follows.

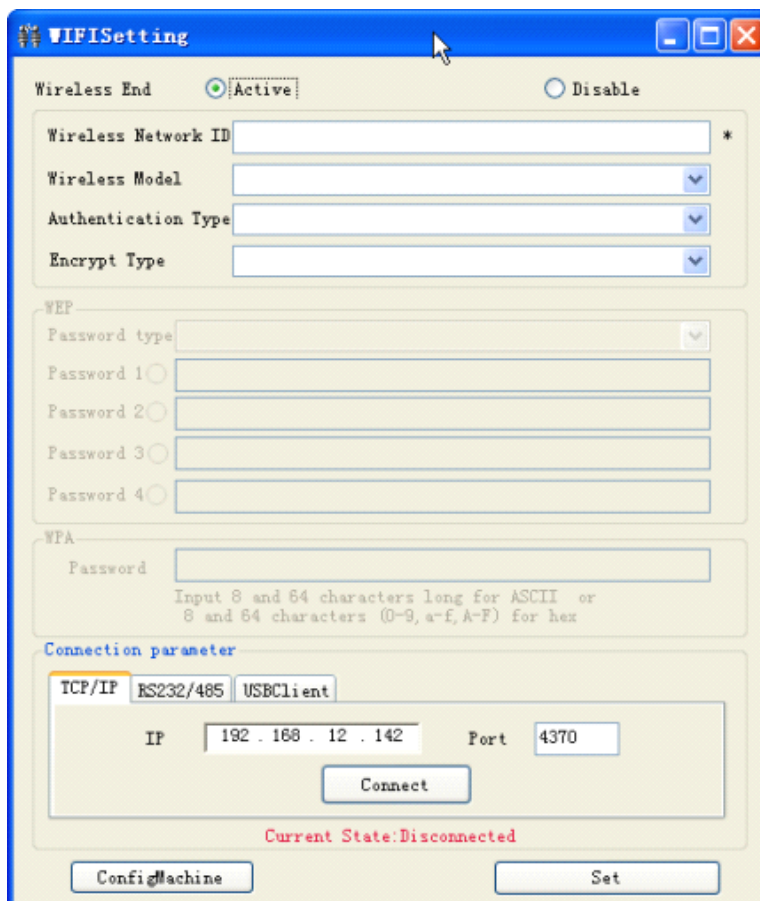


### Step 2: Device Connection

Select one mode to connect the device (Some devices are not support USB

connection). The device will process the initial interface. If the connection is successful, the word above the button will change to [disconnect]. The connection status shows [Connected].

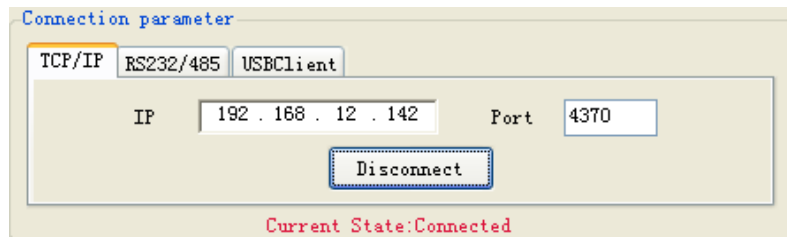

If you click the button, the word above the button will change to [Connect], the connection status shows [Disconnect].

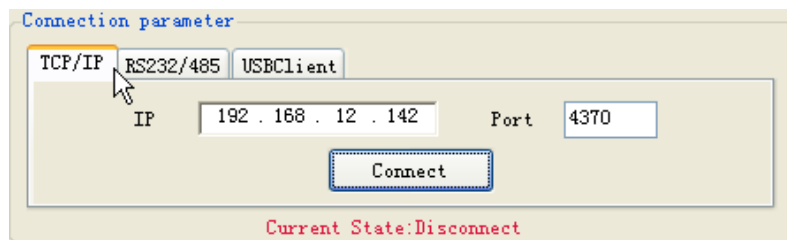


### Step 3: Wireless End

You can select if you need active the wireless network end or not. The default selection is active.




### Step 4: Setting Network Parameter

For the Authentication Type depends on the Wireless Mode, and the Encrypt Type depends on the Authentication Type, so you should select the Wireless Model first, and then select the Authentication Type, finally select the Encrypt Type.

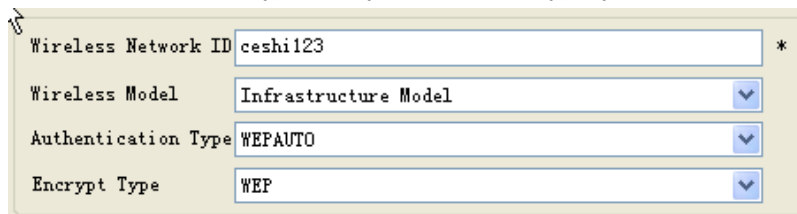

### Step 5: Set the password

Set the password depends on you Encrypt Type selection. Input the WEP and WPA password in the corresponding fields. Set the WEB password as follows.

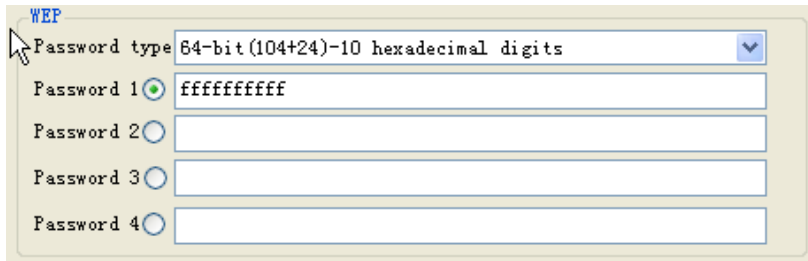

WEP

Password type: 64-bit (104+24)-10 hexadecimal digits


Password 1:  ffffffff

Password 2:

Password 3:

Password 4:

Select the password type and enter the password in the text box. After inputting the password you can see the password only when you click the [Radio] button. Select TKIP or AES, you can input the WPA password in the text box.

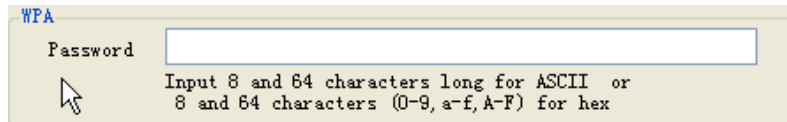


WPA

Password:

Input 8 and 64 characters long for ASCII or 8 and 64 characters (0-9, a-f, A-F) for hex

### Step 6: Configure the Wireless Network IP Address

Click [Set Network IP Address] button, the following dialog will popup.

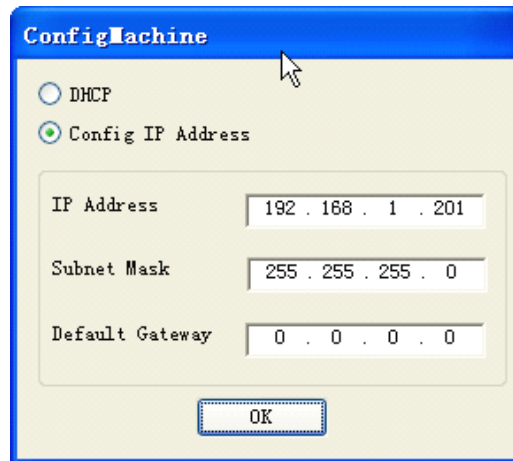

Config Machine

DHCP

Config IP Address

IP Address: 192 . 168 . 1 . 201


Subnet Mask: 255 . 255 . 255 . 0

Default Gateway: 0 . 0 . 0 . 0

OK

### Step 7: Set the Parameter to the Device

After all setting for wireless network is completed, click [Configure Machine] button. If you don't connect the device to PC at beginning, the system will popup "not connect" dialog and check the connection. If the setup is complete, the following dialog popup.

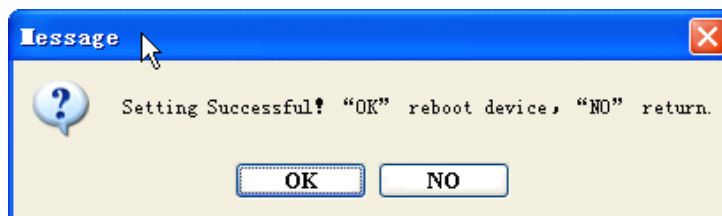

Message

Setting Successful! "OK" reboot device, "NO" return.

OK NO

**Note:** All setting complete, you can see it in the device. Be sure to restart the device, so the configuration change takes effect.